
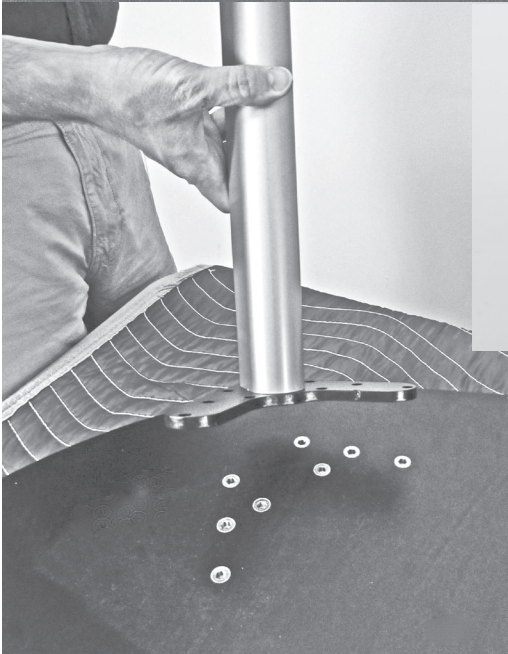


where design meets technology™

# Trapeza™

With the top placed on a soft surface, locate the patterns for the legs.

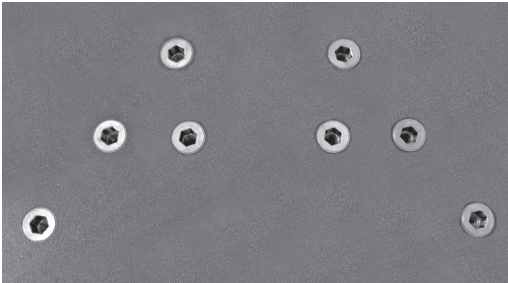

- Place the leg plates over the patterns and secure with provided hex/Phillips Head bolts using a torque controlled screw gun.  
**Do not overtighten.**
- If casters are to be installed, do so after legs have been installed.



- Cord grommets or power ports may be pressure fitted into the circular cutouts.
- Wire manager may be installed using small 1/2" pan head wood screws.
- If ordered, the SnapChase wire manager may be pressed onto the most convenient leg for passing cord from floor to grommets.

