
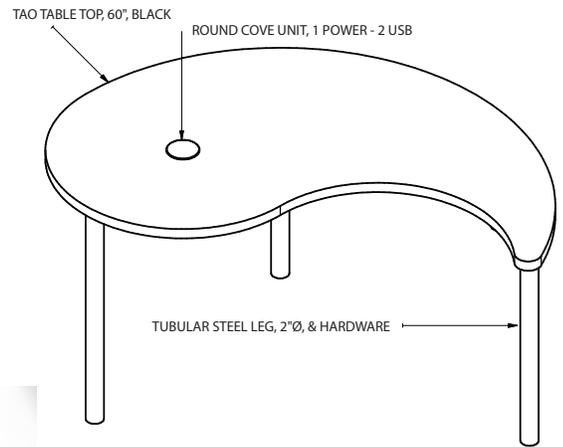


# TAO Assembly Instructions

Place tops face down on a blanketed surface.

Install post legs with 1/4-20 hex head Phillips Drive bolts into installed inserts.


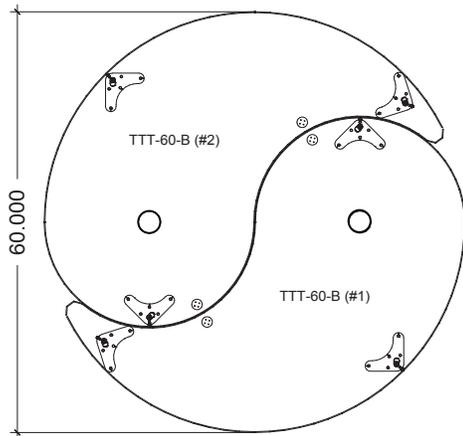


## Install Plako Table Connectors into the pilot holes.

Each Plako Connector consists of 2 hubs and 2 interlocking parts.



Place the hub into the closed circle of the interlocking part, then install the hub with 4 screws (provided).

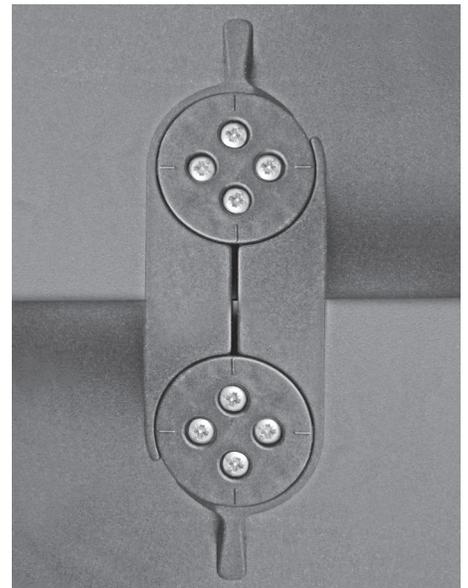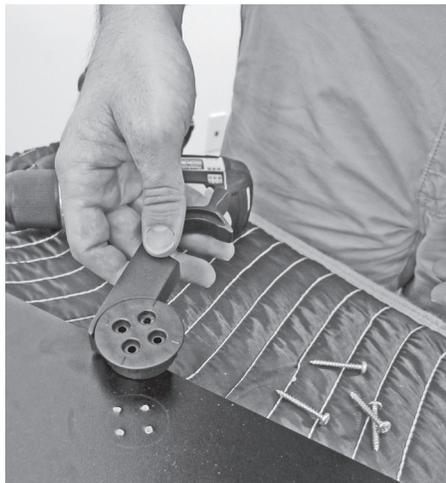

The interlocks snap around the hubs to connect the table. This is done in 2 locations.

Unlock the table sections and turn over to proceed.


# TAO Assembly Instructions

## Install the Cove Round Power and Charging Center.

Insert the Cove through the cutout.

Place brackets and thumb nuts on stud. Tighten until secure. Do not over-tighten.

Connect power as needed.

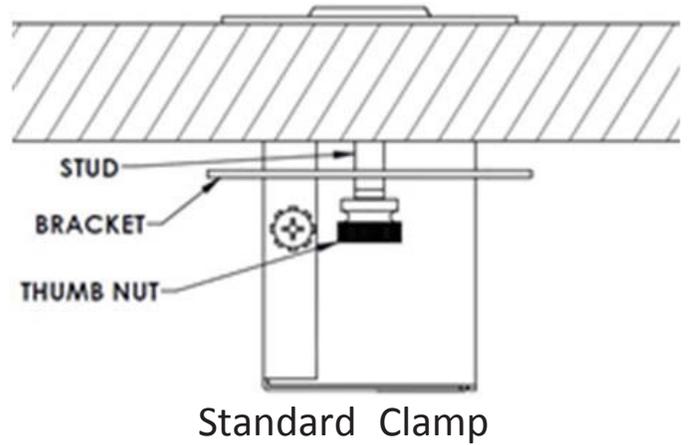

800 770 7042 | [www.smartdesks.com](http://www.smartdesks.com)

