


Installing Mesh Wire Management Modesty Panels

Attach stainless steel hooks to underside approach edge with screws at locations shown. Pilot holes are provided. Hooks are oriented away from the edge.

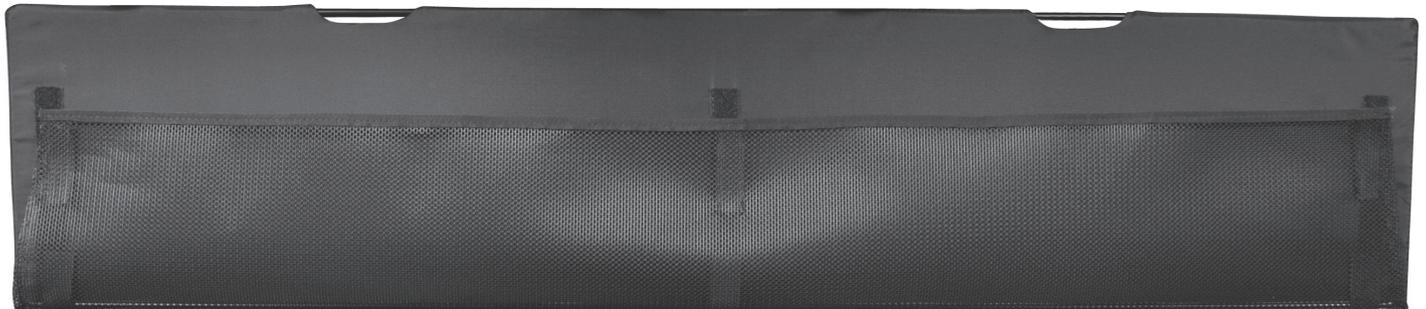

Hang the modesty panel with wire management pocket and hook/loop closures to the user side.

SMART*desks*[®]

www.smartdesks.com
800 770 7042